



**KILEWS JAPAN CO., LTD.**

## ■ **KTM-250**

**DIGITAL TORQUE METER INSTRUCTION MANUAL**



# Operation Manual for Digital Torque Meter

## Model: KTM-250


### 1、Caution for safety

- ◆ Keep work area always clean.  
Cluttered areas and benches may cause injuries.
- ◆ Consider work area environment.  
Do not use torque meter in the rain or in the damp or wet place. Use the product at a place left at constant temperature (about 24°C). Keep work place well lighted.  
Do not use or charge the product in presence of flammable liquids or gases.
- ◆ Keep children away.  
Keep any person other than the operator(s) away from work area.
- ◆ Dress properly.  
Do not wear loose clothing or jewelry, which may be caught in moving parts.
- ◆ Work with the most care.  
When using the product, carefully work, with consideration to how to handle, how to work, work environment, etc.
- ◆ Fix main body firmly.  
When operated for measuring a large torque, use clamps or vises, etc. It is not only more safe than holding by hand but also makes it possible to grip the screwdriver by both hands.
- ◆ Do not apply a torque exceeding the permissible load.  
If applied beyond the permissible load, it may cause damage to the sensor, resulting in accident or injury.
- ◆ Do not disassembly, shock and vibrate this product.  
Avoid disassembling the product that is a precise instrument. If the torque meter is damaged by excessive shock or vibration, the product may not only show the full performance but also result in accident or injury.
- ◆ Caution to electric shock.  
Do not touch power plug by wet hand. It may cause electric shock.
- ◆ For charging the battery be sure to use only exclusive charger.  
Using an original charger other than compatible may cause fire or injury.
- ◆ Charge properly.  
Charge on the indicated voltage. Do not use DC power or engine generator. It may cause abnormal heat, resulting in a fire. Keep the charging time not longer than 8 hours. Overcharge may bursting, overheat and liquid leakage, resulting in a fire or injury.  
Charge in a well-ventilated place. While being charged, do not cover with cloth.


- ◆ Never throw the battery (built-in the torque meter) into fire.  
It may cause burst or give off toxic substance. (The procedure for scrapping the battery shall be followed in accordance with local or regional law on waste disposal. If there is no local or regional law on waste disposal, be sure to dispose of the battery at a recycling shop.)
- ◆ In the following cases, turn off the main switch and disconnect the plug from outlet. When not used or charged; When repaired; When any other danger is expected.
- ◆ Maintain torque meter with care.  
For better and safer performance, check screw joints regularly and use ones whose tips are free from deformation and wear down. For replacement of accessories follow the instruction manual. Inspect cords and extension cords periodically and if damaged, replace them.
- ◆ Do not handle cord violently.  
Do not carry the product hanging by cord or draw out socket from outlet by pulling cord. Do not put cord near to a hot, oily or edgy part.
- ◆ Check for absence of damaged parts.  
Before further use of the product, carefully check for no damage, normal operation, or intended functions. Check whether or not any other components that may affect its operation are normal. Replace parts according to the instruction manual.
- ◆ Have the product repaired by the authorized dealer. Do not modify this product.  
Repair should be made always by the dealer where you purchased the product. If repaired by any person with no knowledge or skills of repair, it may not only show the full performance but also may cause any accident or injury.
- ◆ Use only the original accessories and attachments.  
Do not use any accessories and attachments other than ones specified in this instruction manual.
- ◆ Store properly when not in use.  
Store the torque meter in a dry place and in a height out of children's reach, or secured area. To transport the product, reuse the packing case with which this product was delivered.
- ◆ AJ screw joint need be lubricated by attached lubrication. Torque test will become unstable if lubrication is neglected quite awhile.

2、Appearance KTM-250

① USB	⑩ NG LED
② AC ADAPTOR LED	⑪ DOWN
③ AC ADAPTOR TERMINAL	⑫ MEM/OUTPUT
④ CLEAR SWITCH	⑬ UP
⑤ POWER SWITCH	⑭ UNIT
⑥ RESET **Please press "RESET" button after charging the device at the first time which allows the device recovering to original setting.**	⑮ PRG/SET
	⑯ MODE
	⑰ AVE
⑦ DISPLAY FRAME	⑱ SOCKET
⑧ DISPLAY	⑲ STIFFENING RING
⑨ GOOD LED	

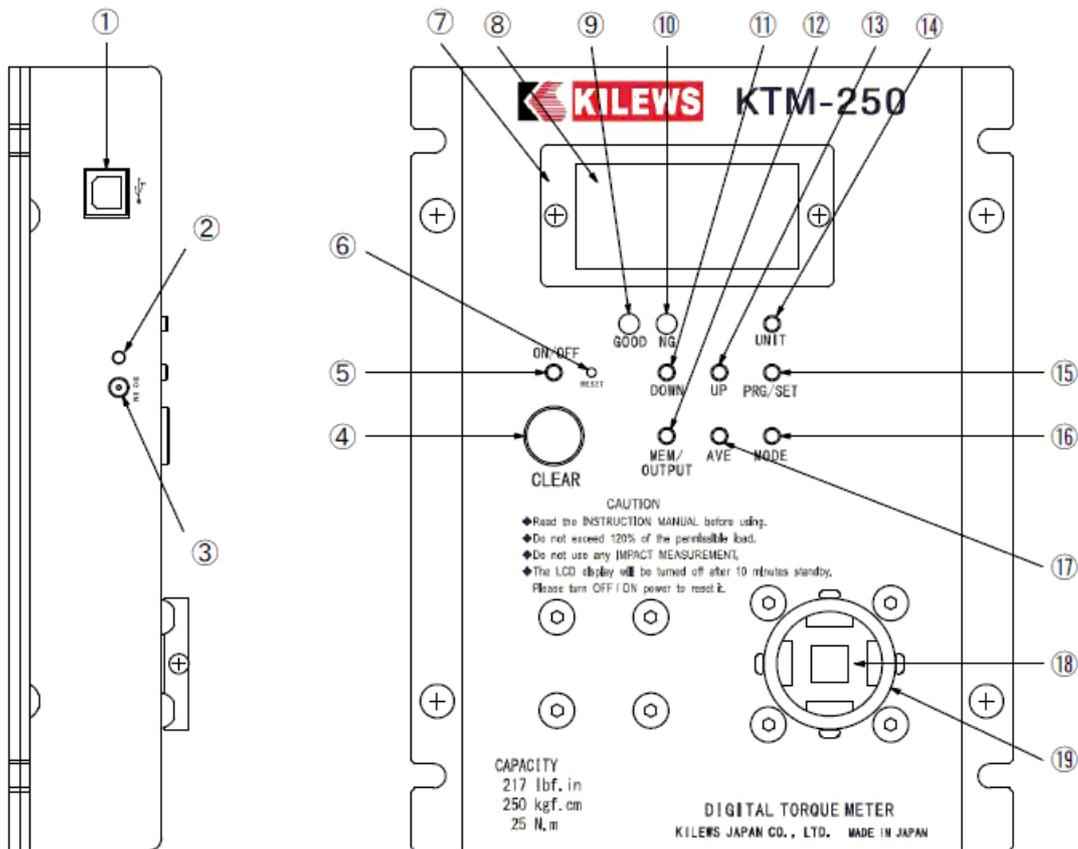

SCREW JOINT  
AJ-250

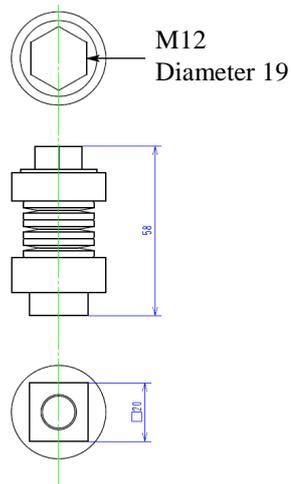

### 3、Specifications

#### 3.1 KTM-250

MODEL	KTM-250	
Measuring range	3.0~217.0 lbf.in	
	3.0~250.0 kgf.cm	
	0.30~25.00 N.m	
Accuracy	+/- 0.5% (Full Scale)	
Display	4 figures of LCD	
Measuring direction	CW · CCW	
Measurement mode 3 way	P-P (peak)	Peak load value hold.
	TRACK	Indication of real time torque value.
	P-D (peak down)	Indication peak down point and hold.
Data transfer	USB 1.0 (Baud rate : 19200)	
Power supply	4.8 VDC (Ni-MH chargeable battery 1.2V×4 cells 1650mAh)	
Measuring unit	lbf.in/kgf.cm/N.m (selectable)	
Charging time	From empty ~3 hours	
Continuous working time	About 12 hours	
Battery life	Chargeable for 300 times or more. However, it varies depending on operating conditions.	
Exclusive charger	INPUT : 100V~240V 50/60Hz OUTPUT : DC 12V 500mA	
Socket size	20 mm square and 9.5 mm square	
Size	160(W) × 210(D) × 45(H) mm	
Weight	About 2.0 kg	

※Do not use for measurement of impact tool. Do not apply more than the specified torque.

### 4、Setting and measuring mode for KTM-250

#### 4.1 Mode setting

Press the MODE key over one second.

It means getting into setting mode when the words PP---PD shown on the below left on LCD screen.

Please press the MODE key if needing to change measuring mode:

real-time value (no indication)---maximum value (PP)---only indicating the first peak value (PD).

Measurement mode	Display	Contents
P-P (peak to peak)	Display section 「PP」 	The maximum under measurement is always displayed. Load holds more than 10 digits*. Usually, this mode is used.
P-D (peak-down)	Display section 「PD」 	A value when a load torque value changes from a rise to descent is displayed. It carries out, once it pushes a clear button, when applying re-load. Load operates more than 10 digits*. It is suitable for measurement of a torque wrench etc.
C (Real-time Output)	Display section 「C」 	The data output of the load torque value is carried out every about 1 / 180 seconds. (A change whole 1 / 12 seconds is possible) It is suitable for torque curve creation or a screw bundle examination.
TRACK	There is no display 	It is mainly used at the time of calibration etc. The value of the load torque concerning a sensor is displayed as it is. (There is no display.)

\* digit-10 digits is 0.10 N.m. (1.0 kgf.cm/1.0 lbf.in)

**4.2 Test unit selection**

Press UNIT key over one second, the system will get into setting mode. The unit will change whenever user press UNIT key.  
 lbf.in-----kgf.cm-----N.m----- (cycle)


**4.3 Power capacity indication**

Displaying on LCD	Contents
	Sufficient power capacity, no need to recharge, the power capacity is still 100% left.
	The power capacity is still 50% left.
	It is not allowed to use urgent charge when the power capacity is 10% left. Because the power will be shut off anytime.
	The power cannot be on when the power capacity is 0% left. LCD will be not working also.

Please use original charger and turn off the power when charging. (input: 100V~ 240V; output: 12V 500mA)

**5、 The operation of functional setting key:**

The operation of functional setting key should collocate with UP key and DOWN key to operate the function except its own function.

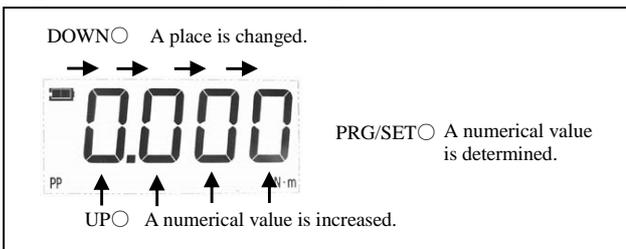


**Setting proper value range of torque**

First of all, setting the torque value both minimum limit and maximum limit, so that user can judge the difference of torque value. For example: We need to test 5 kgf.cm torque. We can set a tolerated range 0.5 kgf.cm, so we can set minimum limit with 4.5 kgf.cm; maximum limit with 5.5 kgf.cm. If the test value less is than 4.5 kgf.cm or higher than 5.5 kgf.cm, the NG light will be on. On the other hand, the GOOD light will be on if the setting is within the range.

**5.1 Setting procedure:**

- 『1』 press PRG/SET key approximately one second, green LED light will be on and getting into set screen. LED monitor will display “ HI ” and jump to 0.0.  
 Press DOWN key, then the value of fourth digit can be set. The change of value is only allowed to increase. If needing increase, press UP key. If changing second digit, please press DOWN key shown as following the drawing:

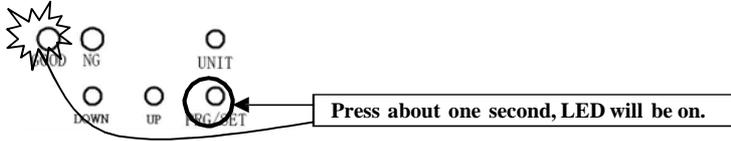


**FOR EXAMPLE**

**Setting maximum limit as 0650 :**




- 『2』 press PRG/SET once again, setting minimum torque value limit, LCD will display “ LO ” and jump to 0.0 again, press again DOWN key

**Setting minimum limit as 0500 :**

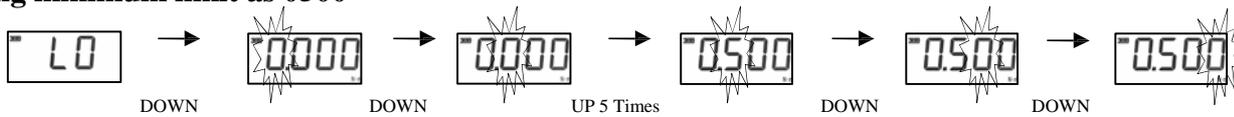


- 『3』 press PRG/SET once again, set the initial value of PD, if the initial value is less than set value, the value will not be recorded. (It is only applying to PD mode)

**Setting the PD mode initial value as 0300 :**

 

- 『4』 press PRG/SET once again. After displaying , a real-time output start value is displayed. A value is set up similarly. When this value is set to 0, the inside of real-time output mode continues outputting data

**Setting the real-time output start value as 0.010 :**

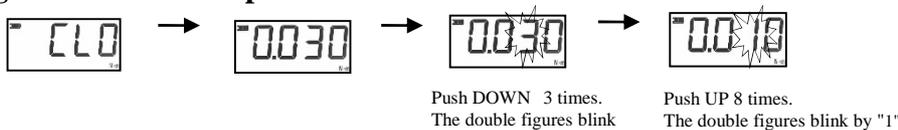

- 『5』 press PRG/SET once again, set clear switch with “ RC ” and needing to match UP/DOWN.


It is set by hand if 0.0C set(0.0C⇔0.1C⇔0.5C⇔1.0C⇔1.5C⇔2.0C⇔2.5C⇔3.0C⇔0.0C); matching CLEAR key also.

**Setting clear with one second :**



 『6』 press PRG/SET once again, setting buzzer, UP/DOWN setting.  
 (ON: normal sound, OFF: no sound, FF: sound comes only under abnormal situation)

**Setup of Buzzer :**



After displaying 『bP』, an ON-OFF-FF setup of a buzzer is displayed. How to sound a buzzer is set up by UP/DOWN.  
 ( 『On』 : Sound altogether. 『OFF』 : Don't sound except exaggerated torque. 『FF』 : Only NG sounds.)  
 If a setup is completed, the PRG/SET key will be pressed again.

**5.2 After setting**


**PRG/SET**

Alarm	Less than minimum value	Between minimum value and maximum value	Over maximum value	Excess torque
LED	Red blink (Slow)	Green light (Good)	Red blink (Quick)	Red light (NG)
BUZZER	Interrupted sound (Slow)	Continuous sound	Interrupted sound (Quick)	Continuous sound

**※Maximum Value, minimum value, average value**

We can take advantage of the AVE key to test maximum value, minimum value and average value. (you can test at most 30 datum).

1. Be sure the test mode is 『PP』 or 『PD』, not TRACK.
2. Press AVE key to make re-testing, the 『AVE』 will blink on the LCD.
3. After several tests. (at most 30 numbers)
4. Press AVE again, the LCD will automatically display the counting numbers —MAX—MIN—AVE.

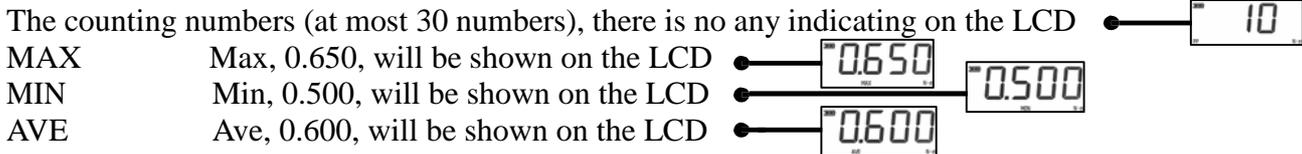

※If measurement over 30 times. Can be displayed [n+001], [n+002].....  
 When measuring more than 30 times, it's eliminated from old data.

【Example】 [n+001] ( 31 times) It's calculated from the 2nd to the 31th.

**6、 Data saving, display, output**

Whenever pressing, CLEAR key will automatically clear and save memory.  
 At the same time signal will automatically output if USB is used.

### 6.1 Data saving

Whenever press CLEAR key, the system will automatically clear the data, meanwhile, the data will be saved in the memory according to serial number. The serial number is from 001 ~ 800 (no more than 800 datum) and the first data will be automatically covered as new data is over 800<sup>th</sup>.

#### 6.1.1 Deleting the single data

Torque value can be deleted. The value of following will move ahead.


SITE	VALUE	Remark
001	10.9	
002	11.1	
003	13.0	Press "clear" to remove this value
004	11.1	
005	11.2	

- 「1」 Several tests later, datum will be kept in memory.
- 「2」 Please press the MEM / OUTPUT key when deleting the data is necessary. The 「MEM」 will appear on the LCD.
- 「3」 Taking advantage of UP/DOWN key searching for site, LED will display "site" and "value", the torque value will be 「13.0」 (blinking around 6 seconds) when choosing 「003」.
- 「4」 Press 「CLEAR」 key, "CLA" will show on the LCD, press CLEAR [----] key again, delete is completed. The following value will move ahead.

SITE	VALUE	Remark
001	10.9	
002	11.1	
003	11.1	The following value will move ahead
004	11.2	The following value will move ahead
005	---	


#### 6.1.2 Delete the data range

- 「1」 Several tests later, datum will be kept in memory.
- 「2」 Please press the MEM / OUTPUT key when deleting the data is necessary. The 「MEM」 will appear on the LCD.
- 「3」 Taking advantage of UP/DOWN key searching for site, LED will display "site" and "value", the torque value will be 「11.1」 (blinking around 6 seconds) when choosing 「003」.
- 「4」 Press 「CLEAR」 key, "CLA" will show on the LCD.
- 「5」 Taking advantage of UP/DOWN key searching for site, LED will display "site" and "value", the torque value will be 「11.2」 (blinking around 6 seconds) when choosing 「004」.
- 「6」 Press the 「CLEAR」 key again [----], delete is completed. The following value will move ahead.

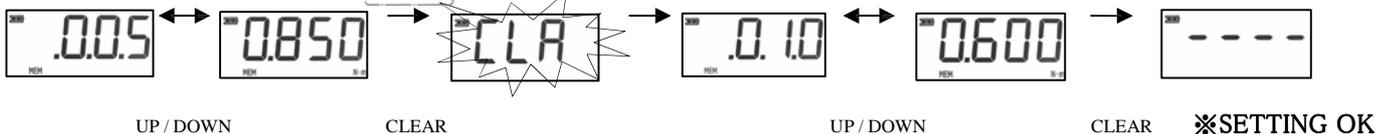

#### 6.1.3 Data output

- 「1」 Press MEM/OUTPUT first, LCD will display "MEM" and the last data is shown also.
- 「2」 Press MEM/OUTPUT again, LCD screen will display "FA", choosing the initial site of output data. For example, the 005 data, press UP/DOWN key to choose 「005」.
- 「3」 Press MEM/OUTPUT again, LCD screen will display "LA", choosing the ending site of output data. For example, the 070 data, press UP/DOWN key to choose 「070」.
- 「4」 Press MEM/OUTPUT again, LCD will display "-P-", means sites 005~070 have been output to USB.

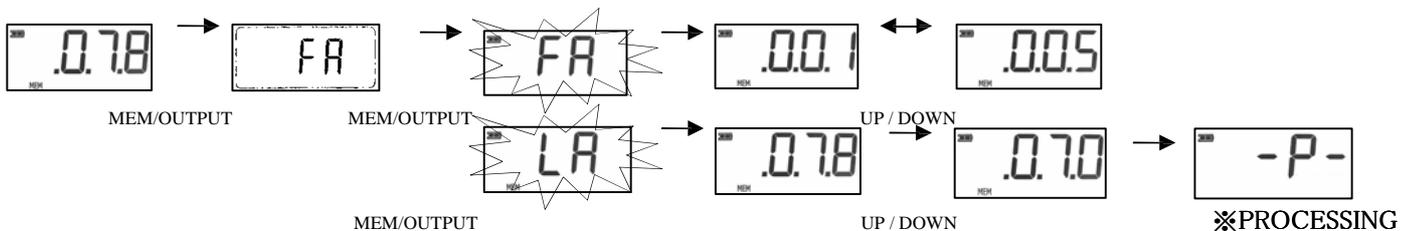

## 6.2 Date transfer

### 6.2.1 Data format

Output data are outputted in the ASCII format with a USB cable.

In addition, in order to take in data, driver software needs to be installed separately.

About installation of driver software.

FTDI Chips Virtual COM Port Drivers <http://www.ftdichip.com/Drivers/VCP.htm>

It checks.

Data Format

Data bit length	start bit 1 + data bit 8 + stop bit 2 + no parity		
Baud rate	19200 bps	Connector form	USB (B type)

### 6.3 All Elimination of Saved Data

1. When carrying out package elimination of all the data, it continues pushing until it displays the CLEAR key as . (About 4 seconds)

2. If the CLEAR key is again pressed during  blink, it will be indicated by blink with .

3. If the CLEAR key is pressed again, it will be displayed as  and all data will be eliminated. (The setting numerical value of each function is not cleared)

※When operation is left during · blink, it will be in the state which can be measured. (Memory is not cleared)

Change of Output Speed of Data

The speed of the output at the time of outputting the data saved can be changed.

A. For Printer Output (Low Speed) -- Setup "00"

B. For Personal Computer Output (High Speed) -- Setup "01"

This setup is adapted also for the change of the output timing of real-time output mode.

A. Low Speed (Every about 1 / 12 Seconds) -- Setup "00"

B. High Speed (Every about 1 / 180 Seconds) -- Setup "01"

(It is set as "01" at the time of purchase.)

The change of a setup is performed by the following methods.

1. In the state of a power source OFF, pressing the PRG key, press the ON/OFF key and switch on a power source.

2. If the PRG key is detached, it will be displayed as "01" or "00."

Since it will change if UP key is pressed, a setup is chosen.

3. If the PRG key is pressed again, after displaying it as , it returns to a torque display, and will be in the state which can be measured.

## 7、 Preparation and the measuring method

### Installation

A measuring instrument may be brandished at the time of measurement of a large torque. Surely, a measuring instrument should use a fixed knob etc. and fix it firmly.

### A setup in the measurement mode

The 3 following modes can be chosen with the setting. (It unites with the use purpose and please choose.)

- ① PP (peak measurement): The maximum under measurement is always displayed.
- ② TRACK (track measurement): The value of the load torque concerning the detection machine is displayed as it is.
- ③ PD (peak down measurement) : Value when load torque value changes from a rise to descent is displayed.  
Carry out after pushing a CLEAR button at once when applying re-load.  
※PD and PP measurement operates from 10 or more numerical values.

### Measuring method

- ④ Check that the display part is zero at the time of power supply ON. If display is not show as zero, set a measurement mode select switch to TRACK, push CLEAR button, and set it as back PP which performed zero adjustment.
- ⑤ The bit of screwdriver to measure among the screw part of screw joint is set firmly, and screwdriver is started.
- ⑥ It checks that operation of screwdriver has been completed normally, the measurement torque value of a display part is read, and it becomes a measurement end.
- ⑦ After a measurement end, if CLEAR button is pushed, a display will be cleared by zero.  
When continuing measurement, it repeats from (1) again.
- ⑧ Choose the TRACK mode, if real time torque value want to be measured.

## 8、 Power supply

If this measuring instrument is left 10 minutes or more or battery capacity stops being sufficient, a power supply is turned off automatically. If battery capacity decreases, since LOBAT will be displayed, charge by inserting the connector of an exclusive charger in an AC ADAPTOR terminal.

The fully charge is in the state which turned OFF the power supply switch, and takes about 8 hours.

(Do not perform charge of 8 hours or more. It may become the cause of the fire by a burst of a battery, generation of heat, and liquid leak, or an injury by fault charge.)

Moreover, when turning off a power supply, a power supply SW is pushed for about 1 second.

## 9、 System Reset

CPU in the tester might not start even if the battery charges it with electricity complete discharged.

(When not using it for a long time.)

In that case, an AC/DC adaptor is connected and a system reset button is pushed.

It will be in an initial state (all the contents of memory are eliminated).

Do not use it under the following condition.

- ※When the display doesn't appear even if this machine is not used for a long time and charged.
- ※Additionally, when the tester doesn't work.

Since all the contents of memory are eliminated when system reset is performed, redo a setup once again.

## 10、 Guarantee

It is allowed to fix gratuitously, if the fault which will originate in manufacture, transportation, etc. of our company within one year after a purchase should occur, although product was manufactured under sufficient quality control.

In the following case, it becomes the charge also within a guarantee term.

Failure by the error, and unjust repair and unjust reconstruction and damage on use Failure by fall etc. and damage after a purchase.

Failure by the natural disaster, pollution, and unusual voltage, and damage.

## 11、 Calibration trust service

Periodical calibration is required in order to manage the accuracy of torque meter.

By our company, the calibration with the high reliability traced to the national standard is performed, and in order to use it within accuracy, I recommend you calibration of one year. I offer a result of calibration document, a certification on calibration, and a traceability system figure by demand. (Periodical calibration is a charge.)

Documents appended at the time of product purchase.

Result of calibration document.

Certification on calibration document.

Traceability system figure.

### The cautions on use

※Please do not apply the load more than the measurement range by any means.

※Attached grease is attached to the bolt or the bearing part, please check before use.

※Where a spring is loosened, please be sure to keep after use.

The number of times of an exchange standard is about 2500 times.

When the following condition comes out, please stop using, and change to new joint.

When there is bend and wear of a screw thread.

When there is sound etc.

### ※CAUTION※

**The new model KTM-250 itself has temporary memory. The memory will be cleared automatically once the machine is not used for a long time. Moreover it is necessary to press “Reset” button after full-charged, then it can be on normally. The user should pay attention to the battery status or save data periodically for keeping memory from losing.**

## 12、 Electric Screwdriver & Torque Meter

### 1、 Torque adjustment for Electric Screwdriver

- A. Turn the Torque Adjusting Ring to increase. or decrease the torque output. Adjust clockwise to higher scale means torque increase; anti-clockwise to lower scale means torque decrease.
- B. Operate electric screwdriver should be step by step in proper sequence, first run with a small torque to fasten the screw, if feel not enough torque, then adjust to higher torque gradually.
- C. The mutual relation between torque output and scale, please refer to the “Torque Range Chart” on the instruction. The correct torque adjustment of fastening screws in subject to screws type, material, size and the object material of being screwed.
- D. When object has been done screw-fastening, see if it meets the standard of quality, then measure the right torque value by Torque Meter, if the screw fastening situation is not yet to reach standard, adjust the torque from electric screwdriver until meets the standard.
- E. Record the torque value with Torque Meter for electric screwdriver, and turn open the front clamping ring of electric screwdriver’s housing, then exchange Torque Fixing Ring to prevent from exceptional torque change.

**2 · Torque Meter Operating Method (Tools: Torque Meter, Automatic Electric Screwdriver)**

- A. Choose a proper electric screwdriver type in accordance with the required torque of screw-fastening. Please consult with electric screwdriver catalogue or vector chart of electric screwdriver
- B. Choose a proper Torque Meter: KTM-15 can be measured torque at maximum 15 kgf.cm ; KTM-150 can be measured torque at maximum 150 kgf.cm; KTM-250 can be measured torque at maximum 250 kgf.cm select the Screw Joint (According to the basis of requiring torque measurement which can be parted with 6 items as following tables:

Torque Range (kgf.cm)	Torque Meter	Spring Joint	Remark
Under 3.0	KTM-15	AJ-3	Max measurable 3 kgf.cm
3.0~15.0	KTM-15	AJ-15	Max measurable 15 kgf.cm
	KTM-150	AJ-15K	
10.0~50.0	KTM-150	AJ-50	Max measurable 50 kgf.cm
50~150	KTM-150	AJ-150	Max measurable 150 kgf.cm
50~250	KTM-250	AJ-250	Max measurable 250 kgf.cm

**C. Test procedures:**

1. Switch on the power
  2. Set Measure Mode (MODE) to “TRACK”
  3. Unit Switch sets to required measurement of unit. (lbf.in ; kgf.cm ; N.m)
- D. Reset adjustment: Check the value on LED display if is at zero status, if not then press Reset button (CLEAR) to display 0.0.
- E. Set Measure Mode (MODE) to “PEAK”.
- F. Cover with connecting pole of Screw Joint on the electric screwdriver, put another end of connecting pole in the head terminal of Screw Joint, power on the electric screwdriver and start to measure output torque of the electric screwdriver.
- G. When torque value has been indicated, it means functional measurement for electric screwdriver is normal and accomplished; the value indicates on LED display is the output torque value of electric screwdriver.
- H. After finishing the measurement of electric screwdriver, reverse to loose Screw Joint for keeping from springiness fatigue.
- I. Use the same electric screwdriver on different brands of Torque Meters (or Screw Joint) could result in different torque value inaccuracy, such inaccuracy comes mostly from different spring character of Screw Joint. If there are two sets or more Torque Meters using on the work site, responsible department should examine Torque Meters periodically and check the gap of spring character among those Screw Joint whether too large, if the answer is yes, then need to change a new spring or the whole set of Screw Joint.
- J. Please note while using Torque Meter, don't charge the battery at the same time in order to avoid affecting the accuracy of test data.

**For any inquiry, please contact your dealer!**

**KILEWS WEST USA INC.**

6945 LTC PKWY

PORT ST LUCIE, FL 34986 USA

PH. +1(772)293-0071 FX. +1(772)465-4368

EMAIL. SALES@KILEWSWEST.COM

WEB. WWW.KILEWSWEST.COM